

MAGNETIC BATTERY REAR LAMP

100% Cable-free Solution



I N S T R U C T I O N

ECE R148


ECE R150

ECE R10

RoHS

RED

● Introduce

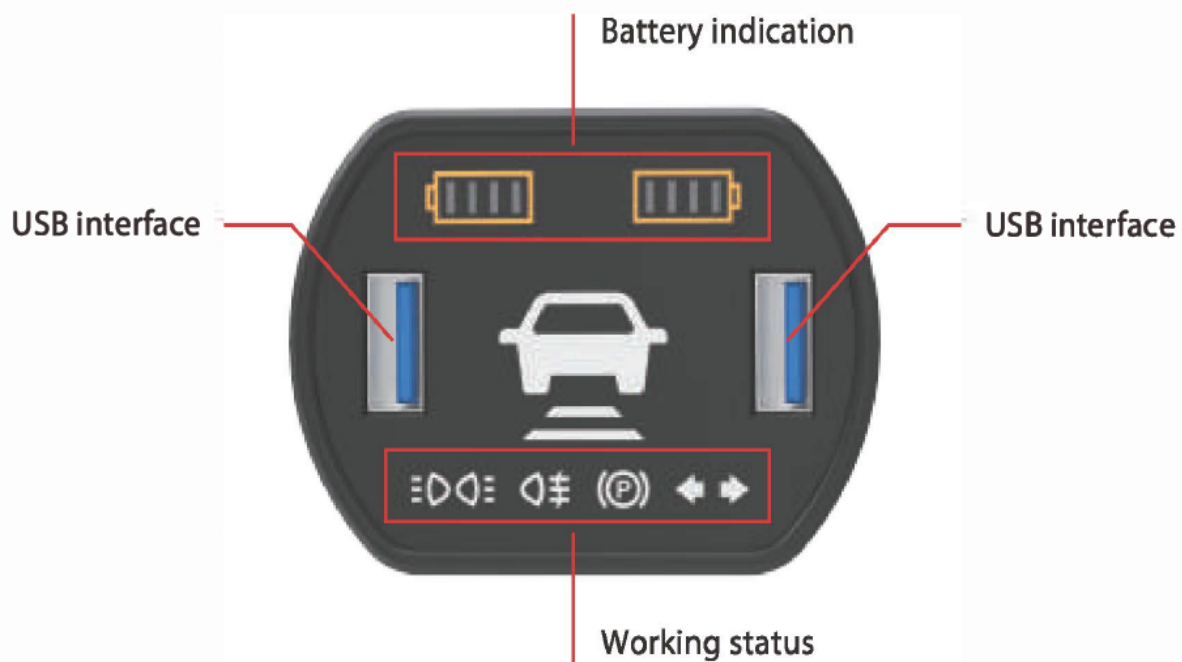

How to synchronize the lamp and transmitter?

Whether in the off state or the on state, press and hold the switch for more than 10 seconds to enter the code matching state, then the on/off indicator and battery indicator would turn on at the same time. For the lamp has not matched, If without transmitting signal, the receiving module will be in the empty state. Meanwhile the rear position lamp is on, after 3 seconds it will automatically turn off and lamp exits the code matching mode.


For the lamp has not matched. With transmitting signal, press and hold the switch for more than 10 seconds to enter the code matching state, then the on/off indicator and battery indicator would turn on at the same time. The rear position lamp will flash twice within 3 seconds. After matching successfully, position lamp will automatically turn off and lamp exits the code matching mode;

For the lamp has matched. Without transmitting signal, press and hold the switch for more than 10 seconds to enter the code matching state, then the on/off indicator and battery indicator would turn on at the same time. The rear position lamp will flash twice within 3 seconds. Then it will automatically turn off and lamp exits the code matching mode;

For the lamp has matched. With transmitting signal, press and hold the switch for more than 10 seconds to enter the code matching state, then the on/off indicator and battery indicator would turn on at the same time. The rear position lamp will flash twice within 3 seconds. After matching successfully, position lamp will automatically turn off and lamp exits the code matching mode;

Notice: Working mode would be on once plug in, press for turning off. Under the working status, the status indicators would flash if there is no lamp signal matching. If lamps are matched, all indicators would show the actual working status.

● Battery Life

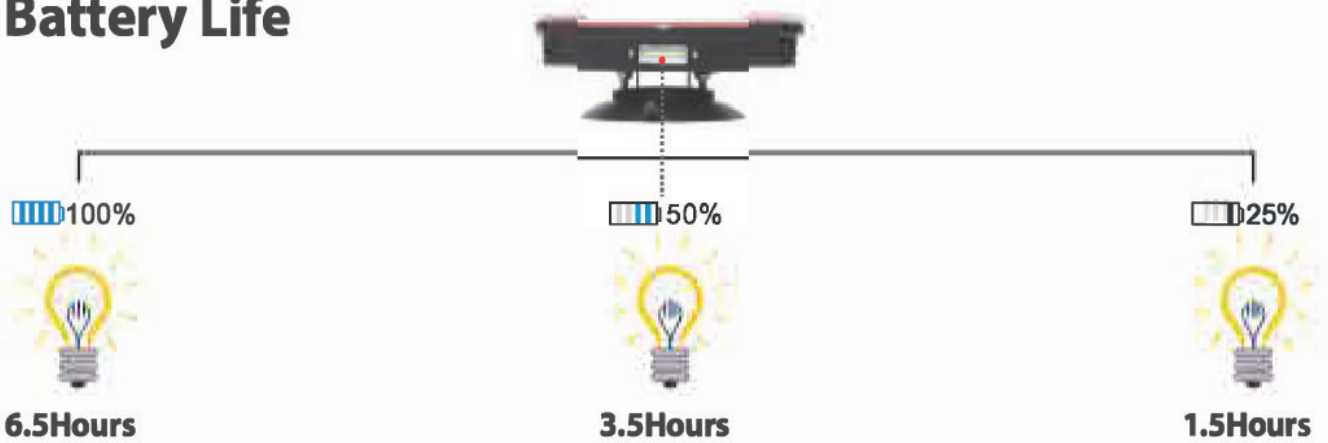

● Content



Packing box x 1



Left Lamp x 1



Right Lamp x 1




Cigar plug x 1



Charging cord x 1


TRANSMITTER

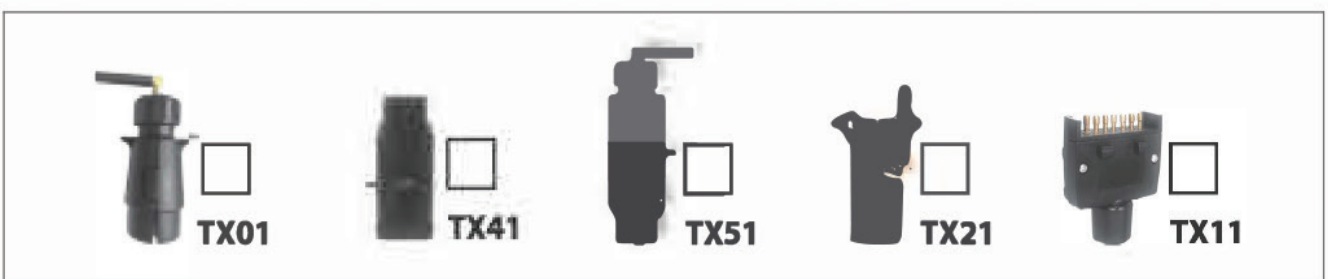

1. Fully charge battery before use
2. Check the battery life before use
3. Check light if working correctly before use
4. Charge the battery every 6 months if not in use
5. Check light regularly when use for long hours

When using the beacon on the road, please be sure to connect the vehicle power supply. When running on battery, it applies only in cases of emergency.


● Pairing

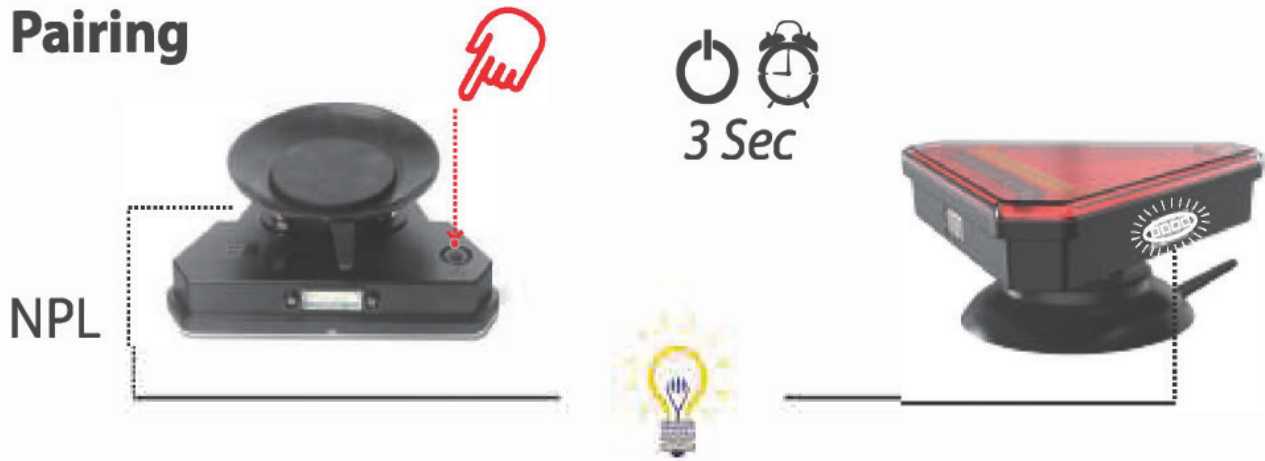

NUMBER PLATE LIGHT : LONG PRESS THREE SECOND, NUMBER PLATE LIGHT ON SEPARATELY, LONG PRESS THREE SECONDS OR DOUBLE-CLICK, NUMBER PLATE LIGHT OFF




● Text

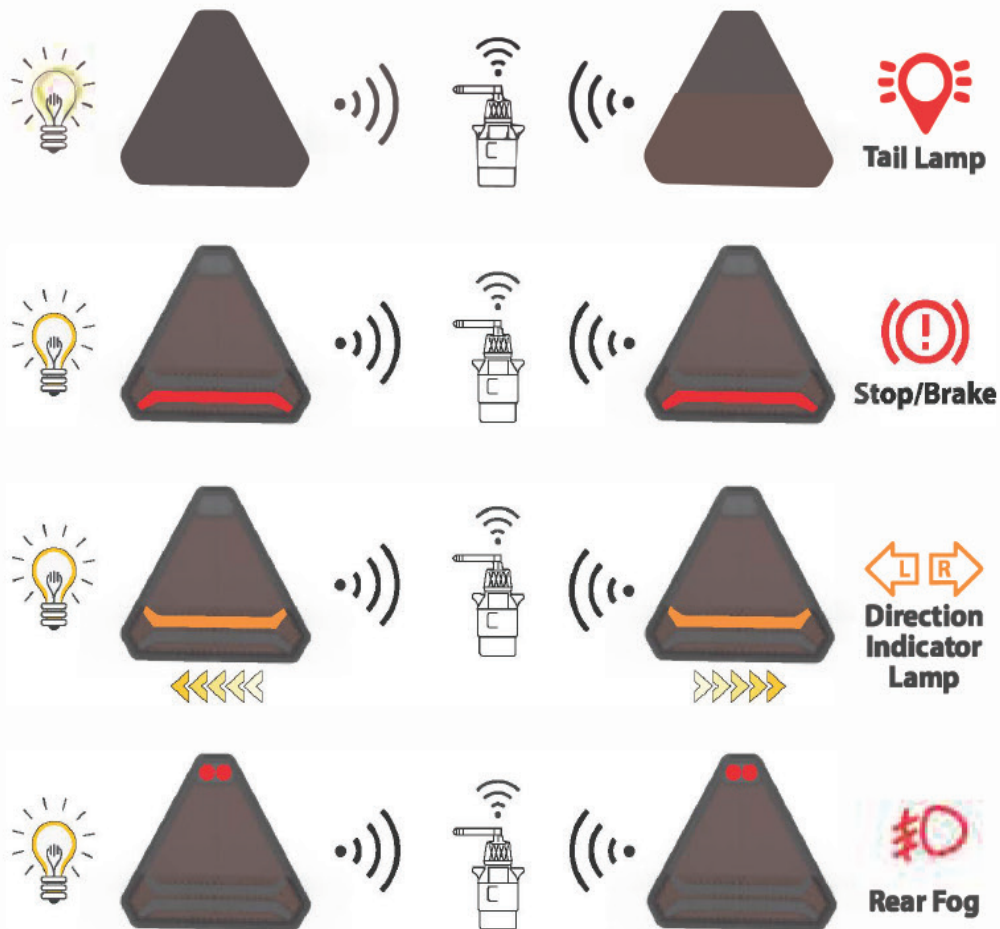

● Charging

5V 3.5Hours

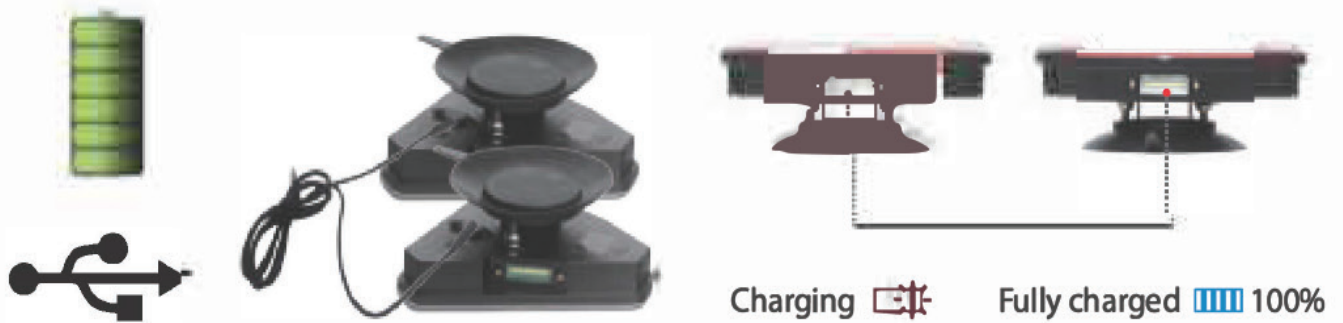

● Installation



ON/OFF

TURN ON : SHORT PRESS ONE TIME, INDICATOR LIGHT ON, MEANS IT'S WORKING NOW.

MEANWHILE POWER INDICATOR LIGHT WILL LIGHT UP , BUT TURN OFF 15 SECONDS LATER.

TURN OFF : SHORT PRESS AGAIN, INDICATOR LIGHT TURN OFF, MEANS LIGHTS STOP WORKING MEANWHILE POWER INDICATOR LIGHT WILL LIGHT UP , BUT TURN OFF 15 SECONDS LATER.

● Parameter

PRODUCT INFORMATION

● Operating Temperature:-40°C~65°C

Lamp function	Power Consumption	SMD	LED Q'TY	LED color
Rear Position Lamp	0.5W	2835	12pcs	●
Direction Indicator Lamp	2.5W	2835	12pcs	●
Stop / Brake	2.5W	2835	12pcs	●
Rear Fog	2.5W	2525	2pcs	●
Reflector	—	—	—	—
Number plate light	1W	2835	6pcs	○

Charging interface: Type-C

Electric core: Single section 21700 lithium ion

Capacity: 3.7-4.2V 4500mAh

Charging voltage: 5V

Charging current: 2000mA

Charging time: About 3.5H

Discharging time: About 6.5H

Overcharge, over discharge, over temperature protection

